

REP-REP-RAE3652-5220070 Removing and installing or replacing left or right backrest for rear seat (load

Vehicle: 3' / E36 / Coupe / 328i / M52 / USA / left-hand drive / AUT / 1998 / 1


System version: 1.1.10

Data version: 3.54


52 20 070

Removing and

installing or replacing left or right backrest for rear seat (load through system)

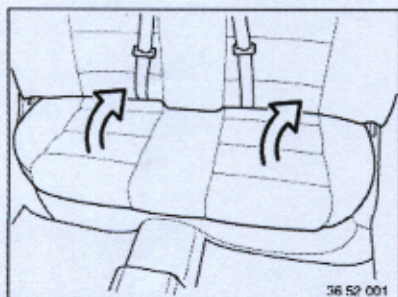

Unclip rear set cushion on left and right and lift out.

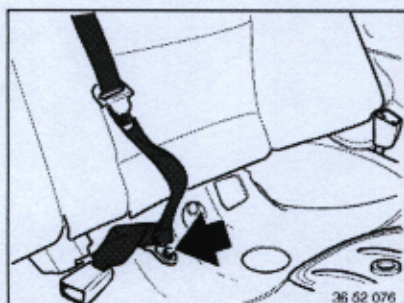


Unscrew bottom seat-belt bolt.


Installation:

Use washers.

Tightening torque,
[refer to Technical Data 72 11 1AZ](#)

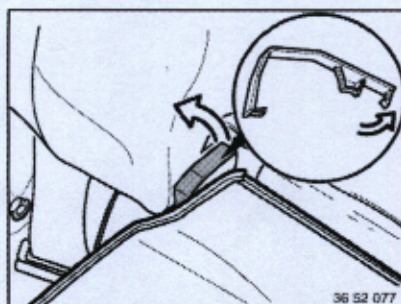

Tilt backrest forward and unclip plate.

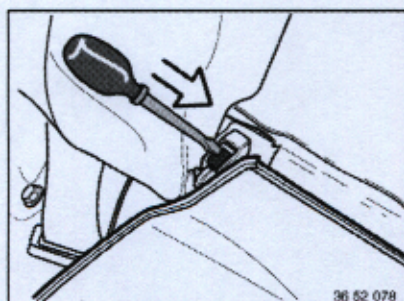

Push lock back and lift backrest out.