 


REP-REP-RAE3652-5221221 Removing and installing or replacing cover for left or right rear seat backrest



Vehicle: 3' / E36 / Coupe / 328i / M52 / USA / left-hand drive / AUT / 1998 / 1


System version: 1.1.10

Data version: 3.54


52 21 221

Removing and

Installing or replacing cover for left or right rear seat backrest (load through system)

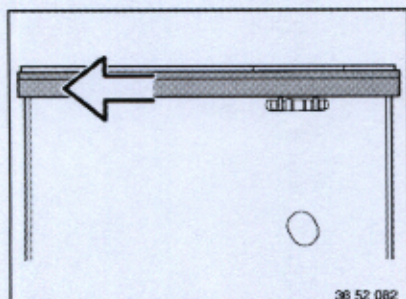


Remove backrest,
refer to 52 20 070
Pull end strip out.

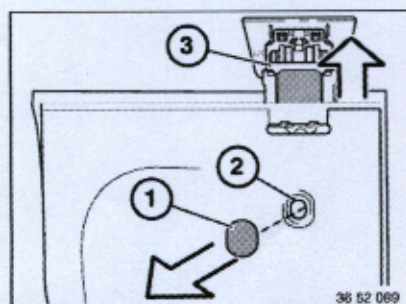


Unclip plate (1).
Remove screw (2) and pull automatic belt tensioner (3) out in upward direction.
Installation:

Tightening torque,
refer to Technical Data

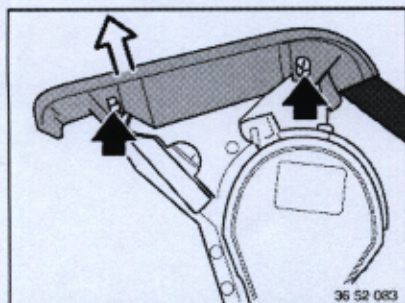



Unclip plate at left and right and remove it.

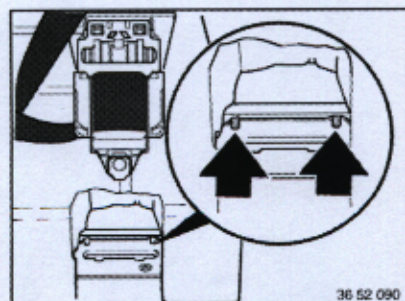

Installation:

Automatic belt tensioner must engage in tabs on the backrest shell.


Remove screw and remove bearing.

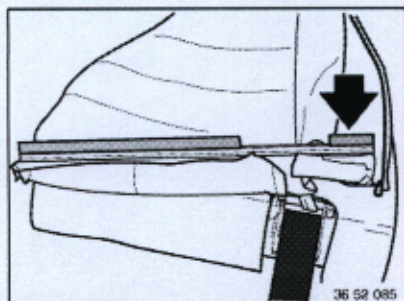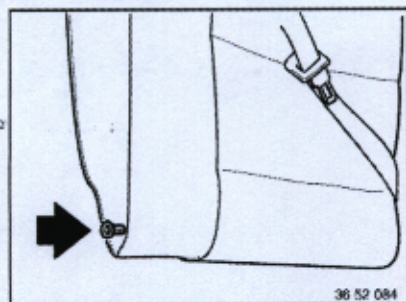

Caution!

Carefully unclip cover strip at top as the short piece could easily be broken off.

Unclip cover all around.

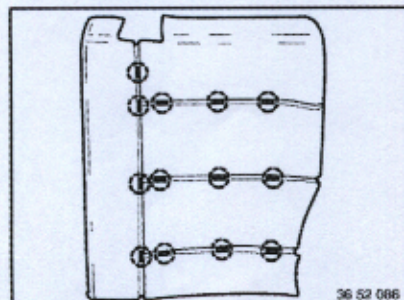


Unclip retainers and remove cover.

Note:

Remove all retainer remainders from the padding and cover.

Installation:


Secure cover to padding at positions shown in the picture.

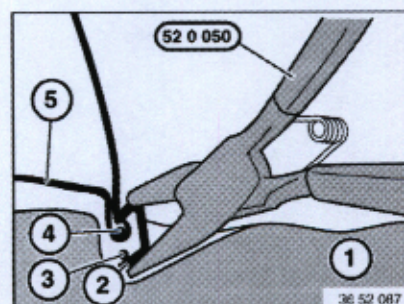

Installation:

Lock new retainers by bending with special tool 52 0 050.

- 1 Foam section
- 2 Clip
- 3 Retaining rod in foam section
- 4 Retaining rod in cover
- 5 Cover

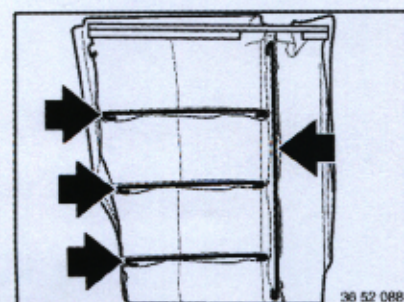

Pull securing rods out.

Installation:

Pull old securing rods into new cover, cutting the new cover for this purpose.