

REP-REP-RAE3652-5210079 Replacing mounting clips for front seat cushion padding

Vehicle: 3' / E36 / Coupe / 328i / M52 / USA / left-hand drive / AUT / 1998 / 1

System version: 1.1.10


Data version: 3.54

clips for front seat cushion padding

52 10 079

Replacing mounting

Run seat up as far as possible.

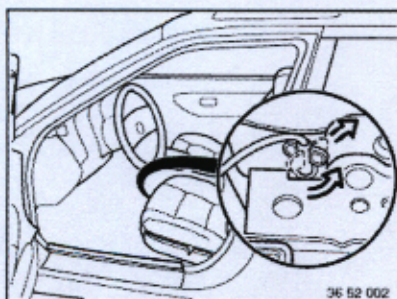

Caution!

Deactivating belt-lock tightener:

Manual Seats:

Turn toggle 90° and detach cable upwards.


Installation note:

Attach cable carefully.

Check for correct seating of cable.

Seat belt lock tensioner will not work if seating is incorrect!

Refer to General Information in gr. 72.

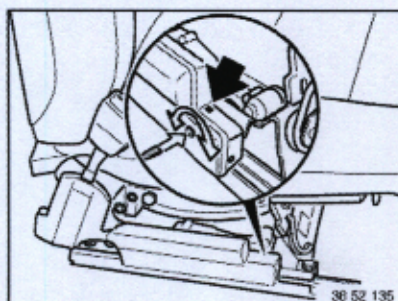


Power Seats:

Turn slotted head screw until green mark in sight glass changes to red.

Installation note:


Turn mark to green.

Seat belt lock tensioner will not work if at red mark!

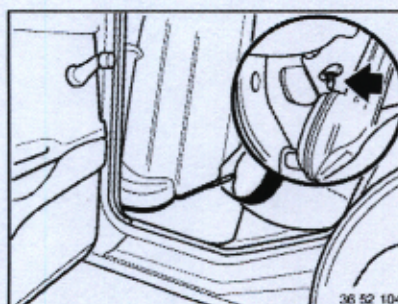


Cut off clips using snippers.

Cut off clips using snippers.

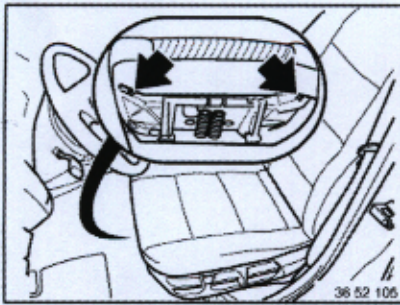

Sport Seats:
Remove screws at front.

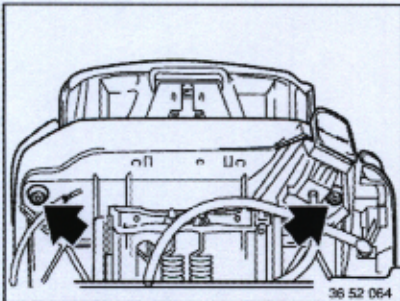


Adjust backrest back as far as possible.


Note:

If seat is heated, be careful not to damage electric wires.


Unclip entrance-end clip carefully together with cushion padding straight upwards.

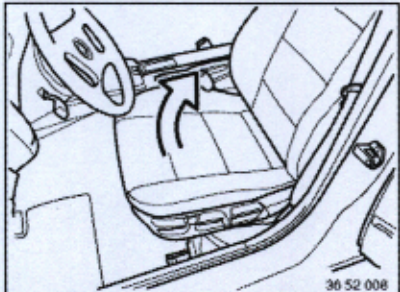


Seat Heating:
Disconnect plug.
Unlock and pull off seat heating plug receptacle.

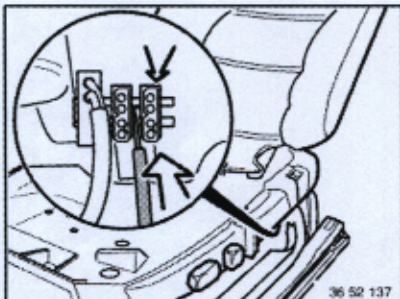

Guide plug (1) through seat cushion shell (2) and remove cushion padding (3).

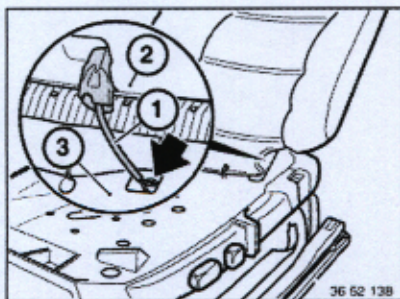


Sports Seat:
Remove screws and remove cushion padding together with thigh support.

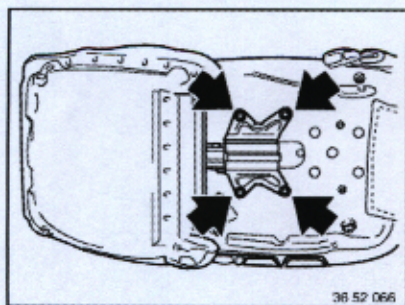


Installation note:

Remove clip remainders.

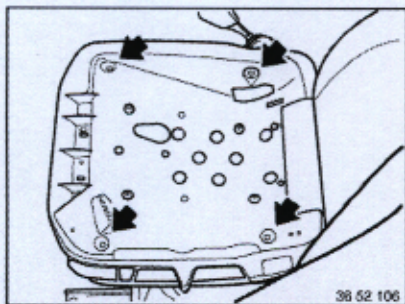


Installation note:

Pinch off clip heads in cushion padding using cutting pliers (head of cutting pliers ground flat).

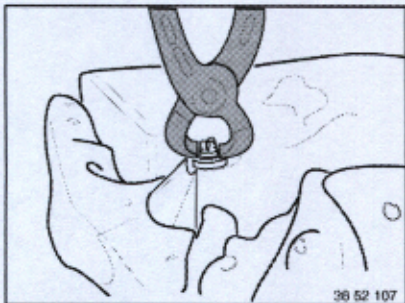

Installation note:

Insert rest of clip through holder into foam rubber.

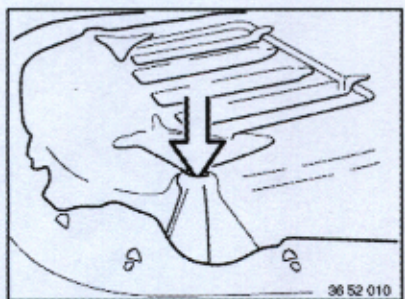

Installation note:

Insert new clips and clip cushion padding on seat cushion shell.

